



Upper Sandusky's High Speed Wireless Internet Provider
13910 Co. Hwy. 330
Upper Sandusky, OH 43351
(419) 294-4141

The Proper Procedure for Wireless Radio Reset:

1. Locate the **DC Injector** or **Power Shot** usually in the vicinity of your computer.
2. Unplug the **Black Round Power Supply Cable** from the **DC Injector** or **Power Shot**, leave unplugged for **30 seconds**.
3. Reconnect the **Black Round Power Supply Cable** in the **DC Injector** or **Power Shot**. This reset may take up to **2 minutes** to complete. If you have successfully reset radio, the **Red X** on the Computer Icon (*Lower Right corner of your computer screen*) should go away, indicating that you now have a connection to your radio.

Protecting Your Wireless Radio From Thunderstorm Damage:

Disconnecting the Wireless Radio

1. Locate the **DC Injector** or **Power Shot**
2. Unplug the **Black Round Power Supply Cable** in the **DC Injector** or **Power Shot**.
3. Disconnect **Ethernet Cable** (*it is usually black*) from the **DC Injector** or **Power Shot**, this is the cable that connects to your **Wireless Radio**.

Powering Up the Wireless Radio

1. Reconnect **Ethernet Cable** (*it is usually black*) back into the **DC Injector** or **Power Shot**, this is the cable that connects to your **Wireless Radio**.
2. Reconnect **Black Round Power Supply Cable** back into the **DC Injector** or **Power Shot**.

It may take up to **2 minutes** for the radio to properly reset. This may be indicated by the **Red X** on the Computer Icon (*Lower Right side of the Computer Screen*). *The Red X* will go away, indicating that there is a connection to your Wireless Radio.

The above information should be put to use if you are going on vacation or anytime a storm could occur during your absence.